



VOLO – Hardware reset

In the event you need to perform a full hardware reset, on a master or slave controller, follow the simple steps below.

1. Switch power off
2. Remove reader 1
3. Connect Reader 1 Red LED pin to Reader 1 Media Detect pin
4. Switch power on
5. OK LED will flash on and off quickly a few times
6. OK LED returns to normal slow flash (equal on and off time) indicating that it is back in normal mode and trying to connect
7. Switch power off
8. Remove temporary reset connection (step 3)
9. Replace reader 1 (if appropriate)
10. Switch power on.

Your controller is now default and you will need to reinstate your controller via the web page